




## CURRENT SENSOR SELECTION GUIDE\*

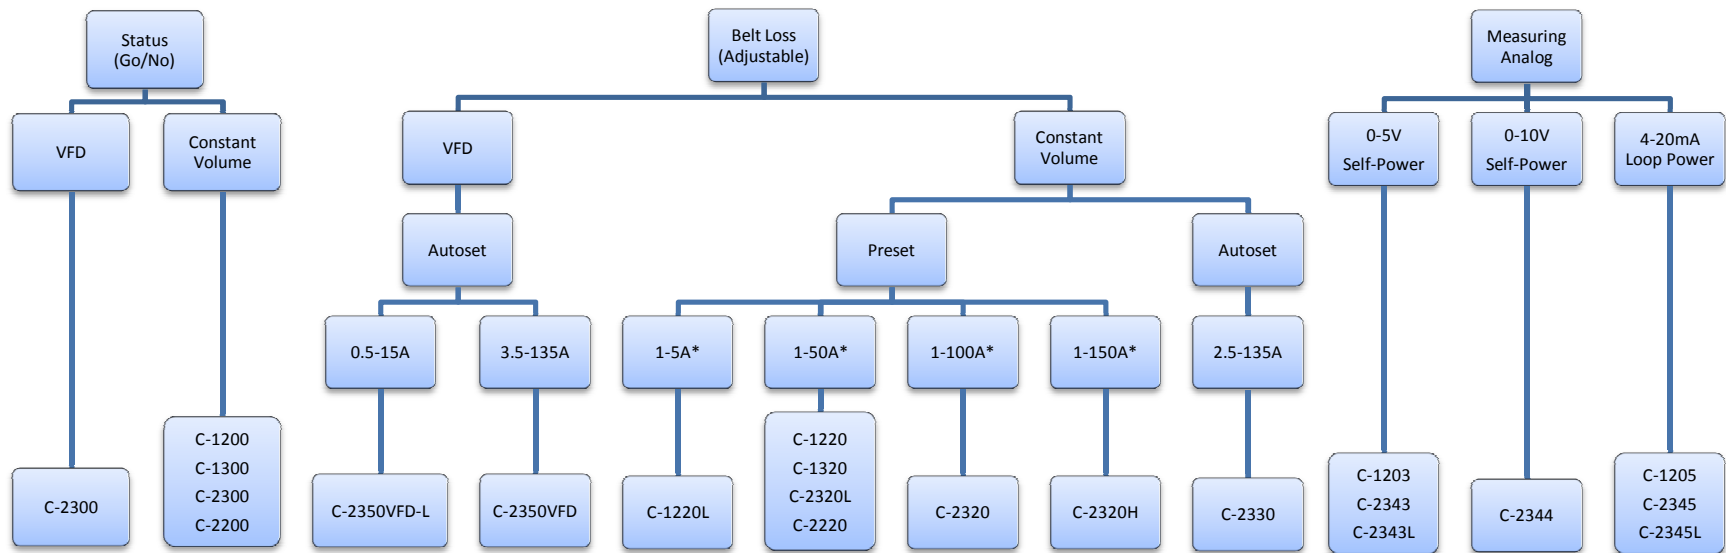

**C-12XX** = MINI SOLID CORE

**C-13XX** = SOLID CORE

**C-22XX** = MINI SPLIT CORE

**C-23XX** = SPLIT CORE

\*Read sensor spec sheet/install guide to ensure compatibility with each application

\*Preset amperage ranges are approximated; see datasheet for specific ranges of each current sensor to ensure compatibility