

INSTALLATION INSTRUCTIONS

CO2RL Designer Series Room CO2 Transmitters



IMPORTANT WARNINGS

- Only qualified trade installers should install this product
- This product is not intended for life-safety applications
- Do not install in hazardous or classified locations
- The installer is responsible for all applicable codes
- De-energize power supply prior to installation or service


PRODUCT APPLICATION LIMITATION:

Senva products are not designed for life or safety applications. Senva products are not intended for use in critical applications such as nuclear facilities, human implantable device or life support. Senva is not liable, in whole or in part, for any claims or damages arising from such uses.


INSTALLATION

1. **IMPORTANT!** Locate sensor in an area away from ventilation sources and heat generating equipment and appliances. Sensor should be mounted at light switch height in a vertical orientation. Use insulating material behind sensor to ensure reading accuracy.


NOTE: Do not install sensor in multi-gang electrical boxes with line voltage or other electrical devices.

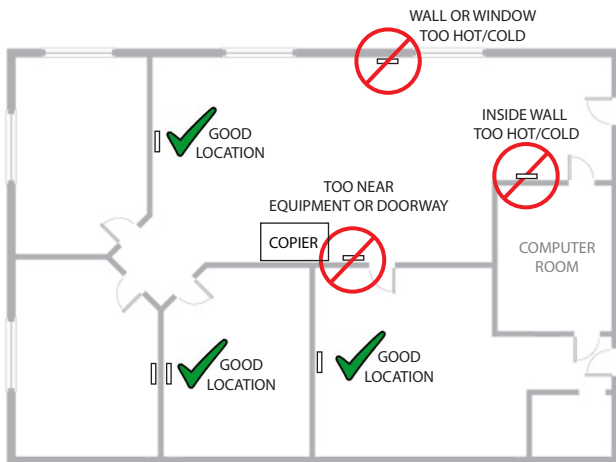

2. Wire sensor as shown.

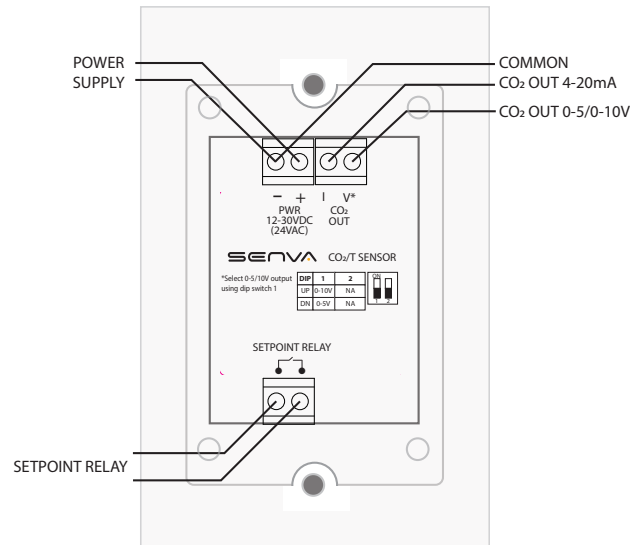

3. Set DIP switch positions to accommodate your application. DIP switch 2 only applies to units with transmitter temperature output selected.

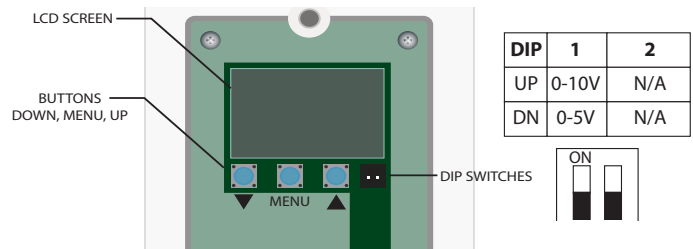

4. Install insulation in junction box, then install base plate and sensor assembly. Sensor must be installed in the orientation shown, with sensor near bottom left corner.

5. Snap on decorative trim ring to complete installation.

OPERATION

Press center MENU button to cycle between:

- SC** Scaling "2" = 2000ppm, "5" = 5000ppm, "10" = 10000ppm
- SPH** Setpoint, Hi (Closed above this level)
- SPL** Setpoint, Lo (Open below this level)
- Adj** Manual calibration adjustment +/-250ppm
- CAL** *Automatic calibration - ON/OFF

The upper ▲ arrow and lower ▼ arrow will show the current setting and then adjusted values on consecutive presses.

*For continuously occupied areas or greenhouses, it is recommended to turn automatic calibration to 'off'. CO2RL-D (Dual Channel CO2) products will have with calibration 'off' by default.

SPECIFICATIONS

Power supply	AC Supply/DC Supply	24VAC ⁽¹⁾ 100mA max / 12-30VDC, 50mA max
Outputs	CO ₂ and Temperature (option)	3-wire 4-20mA, 0-5V or 0-10V ⁽²⁾ (selectable)
	Relay	Solid state, 1A@30VAC/DC, N.O.
Output scaling	CO ₂	0-2000ppm (default), 0-5000ppm or 10,000ppm (selectable)
CO ₂ Sensor Performance	Type	Non-dispersive Infrared (NDIR)
	Accuracy (Standard)	±(30ppm +3% of reading) (400-2000ppm), @-10-50°C ±(50ppm +5% of reading) (2000-5000ppm), @-10-50°C ±(100ppm+10% of reading) (5000-10000ppm), @ 0-50C
	Accuracy (Dual Channel)	±(30ppm+3% of reading) (0-2000ppm), @ 0-50C ±(50ppm+3% of reading) (2000-5000ppm), @ -10-50C ±(100ppm+10% of reading) (5000-10000ppm), @ 0-50C
	Drift with ABC disabled (Standard)	35ppm/month ⁽³⁾
	Drift with ABC disabled (Dual Channel)	5ppm/month ⁽³⁾
	Range	0-2000/5000ppm; Programmable up to 10,000ppm
	Response time	60s to 90% reading
	Output update rate	1s
	Element Operating Environment ⁽⁴⁾	14 to 122°F (-10 to 50°C), 0 to 95% RH
Environmental	Enclosure Rating	IP20/NEMA 1
	Max Operating Temp	14 to 122°F (-10 to 50°C)


(1) One side of transformer secondary is connected to signal common. Dedicated transformer is recommended.

(2) 15-30VDC/24VAC power supply voltage required for 10 Volt output.

(3) *It is not recommended to de-activate ABC (auto-calibration) except for continuously occupied spaces or greenhouses. Drift ratings may vary based on environment.*

(4) Operation outside of element operating environment may result in reduced accuracy.

DIMENSIONS

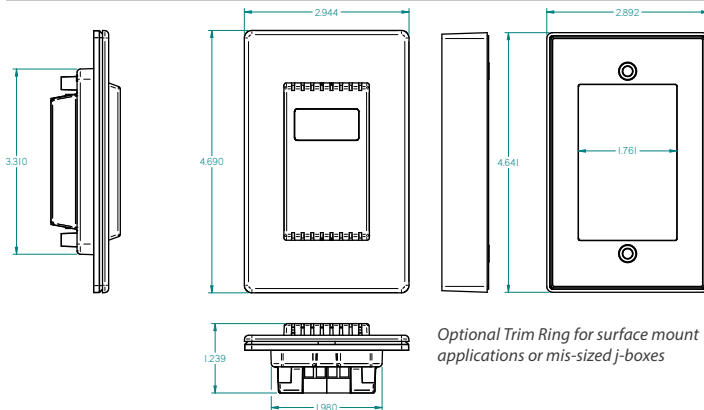

CALIBRATION

Automatic Calibration feature:

The sensor will automatically track low ambient CO₂ levels and gradually make adjustments to compensate for sensor drift due to long-term aging of the IR light source. In applications where CO₂ levels are continuously elevated, or spaces are occupied day and night, it is recommended to use our standard room CO₂ sensor with selectable automatic calibration.

Senva CO₂ sensors are factory calibrated to controlled test gases. No field calibration is necessary or recommended. However, to facilitate compliance with job requirements and commissioning procedures, provisions for field calibration are provided:

1. 1. Locate calibration instrument and sensor in close proximity to each other in a controlled environment free of drafts, people, and equipment to reduce influence on CO₂ and temperature.
2. 2. Compare output of sensor to calibration instrument, and note difference. (In 0-10V mode/2000ppm range, 1V = 200ppm)
3. 3. Using the buttons on front of unit, adjust offset value for CO₂ as needed. Factory calibration may be restored by setting offset back to 0.

In extreme cases where the sensor module has been damaged, a new module may be installed in the field. Consult factory for replacement module and instructions.

TROUBLESHOOTING

Symptom	Solution
No output	Check wiring. Ensure power supply meets requirements.
CO ₂ reading error	Verify control panel software is configured for correct output scaling.
	Verify accuracy of test instrument. Observe installation and calibration guidelines
	Install insulation foam gasket provided to prevent thermal conduction from inside wall.
	Perform calibration only if necessary.