


INSTALLATION INSTRUCTIONS

C-2330, Auto-Calibrating Mini Split-Core Digital Output



Not for use on variable speed drives.
Use C-2350-VFD for VFD applications.

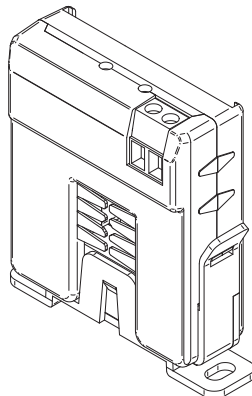

DANGER

Failure to follow these instructions will result in



Hazard of electrical shock, explosion, and arc flash

death or serious injury.

- Follow ALL requirements in NFPA 70E for safe work practices and for Personal Protective Equipment (USA) and other applicable local codes when installing this product
- Only qualified electrical personnel should install this product.
- Read, understand, and follow all instructions thoroughly
- Install only on insulated conductors
- Lock out and tag out all power sources prior to installation. Use properly rated voltage sensing instrument to determine no voltage is present



WARNING

Failure to follow these instructions could result in death or serious injury.



Automated equipment may start without warning

- Equipment monitored/operated by this device may start without warning. Keep clear of apparatus at all times

IMPORTANT WARNINGS

- Only qualified trade installers should install this product
- This product is not intended for life-safety applications
- Do not install in hazardous or classified locations
- The installer is responsible for all applicable codes
- This product must be installed in a suitable electrical enclosure

INSTALLATION




Disconnect, lock out and tag out all power supplies during installation

- Determine mounting location for the sensor near the conductor to be monitored. The sensor should be located AT LEAST 1/2" from any uninsulated conductor.
- Sensor features a flexible iris which allows the sensor to hang on the conductor if local codes permit. A bracket is included for screw mounting or attaching to DIN rail. For screw mounting, drill two 3/32" pilot holes using the bracket as a template; ensure no drill shavings are present in enclosure. Attach bracket with screws provided.
- Clamp sensor around INSULATED CONDUCTOR ONLY, 600VAC MAX to be monitored.
- Snap the sensor into the mounting bracket.
- Wire the output of the sensor to a control panel digital input loop not to exceed 30VAC/DC wetting voltage. Tighten terminals to 3.5 in-lb.

CALIBRATION

- No calibration is necessary for normal applications. Sensor will automatically learn motor run current and adjust threshold as needed.
- To manually re-calibrate sensor, press and hold button for 1 second. LED will blink twice. Sensor will discontinue automatic threshold adjustment.
- To set sensor to go/no mode, press and hold button for 5 seconds. LED will blink 3 times.


WIRING EXAMPLES

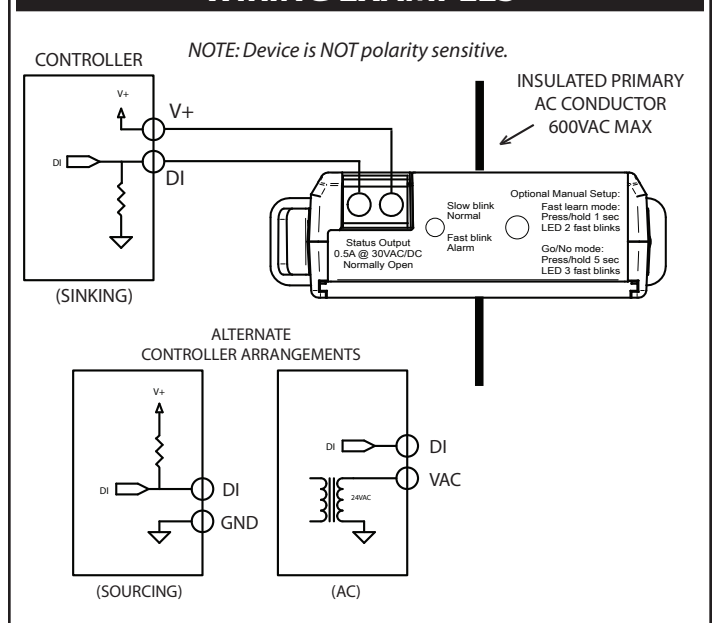

PRODUCT APPLICATION LIMITATION:

Senva products are not designed for life or safety applications. Senva products are not intended for use in critical applications such as nuclear facilities, human implantable device or life support. Senva is not liable, in whole or in part, for any claims or damages arising from such uses.


DIMENSIONS

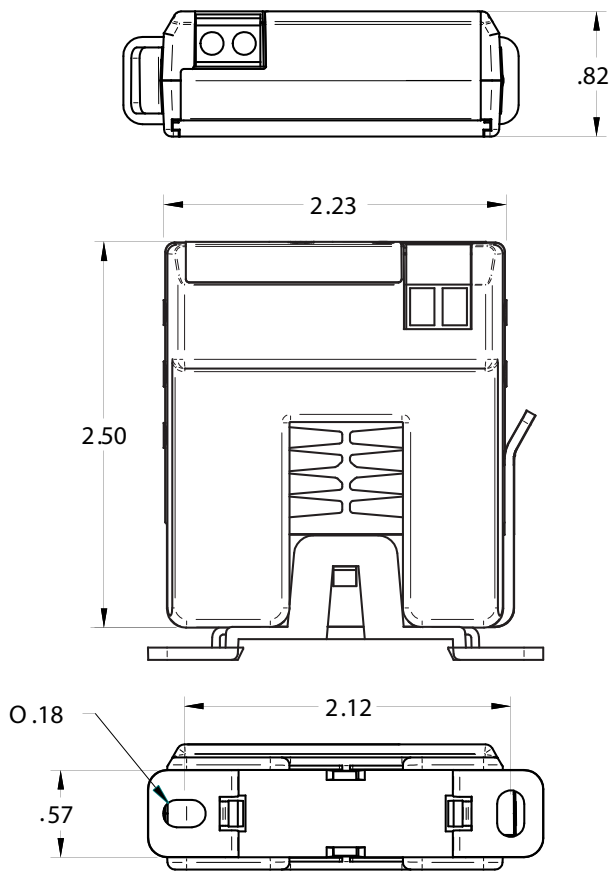

TECH TIPS

On low current loads, wrap sensor multiple times to increase sensitivity


CAUTION: Do not exceed sensor maximum current. The current detected by the sensor will increase 1X with each wrap.

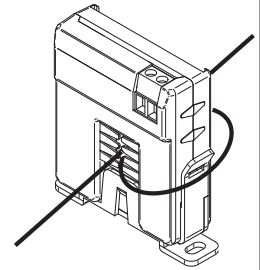

To monitor loads greater than the current sensor maximum rating

Use of 5A CT is NOT recommended. Consult factory for extended range version.

OPERATION

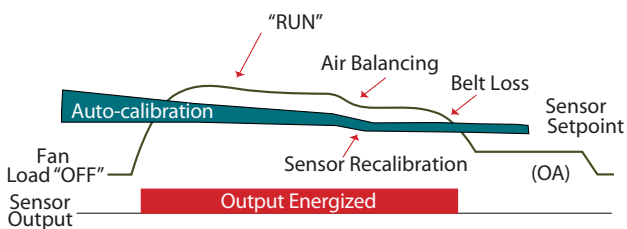

The C-2330 output is closed whenever motor run current exceeds learned setpoint. Setpoint adjusts automatically over time to compensate for load changes caused by air balancing and other small changes in normal run current.

Typical load status applications include:

- Proof of flow
- Belt-loss detection
- Coupling shear
- Contactor/Starter failure

Troubleshooting

Symptom	Causes	Remedy
Sensor output does not change state	Amperage is below sensor minimum threshold	Wrap monitored conductor turns through sensor. See Tech Tips
	Testing with ohm meter yields incorrect results	Output cannot be tested with ohm meter
	Incorrect control wiring	Ensure control loop voltage is present
Sensor reports "false" alarms.	Sensor may be installed on VFD.	Use C-2350-VFD

Maximum surrounding air ambient, 60 ° C.
For use in Pollution Degree 2 Environment.

Part Number	C-2330
Amperage Range	2.5A (on)~135A (200A Max.)
Output Type	NO, solid-state FET
Output Rating	1.0A@30VAC/DC Max.
Temperature Rating	-15~60 ° C
Insulation Class	600V RMS. For use on insulated conductors only! Use minimum 75 ° C insulated conductor
Sensor Power	Induced
Frequency Range	50/60Hz
Dimensions (LxWxH)	2.51" x 2.23" x 0.82" (1.4" H with optional relay module)
Sensor Aperture	0.75"