

# INSTALLATION INSTRUCTIONS

## CO2D, Duct Mount Duct CO2 sensor



### IMPORTANT WARNINGS


- Only qualified trade installers should install this product
- This product is not intended for life-safety applications
- Do not install in hazardous or classified locations
- The installer is responsible for all applicable codes
- De-energize power supply prior to installation or service

### PRODUCT APPLICATION LIMITATION:

Senva products are not designed for life or safety applications. Senva products are not intended for use in critical applications such as nuclear facilities, human implantable device or life support. Senva is not liable, in whole or in part, for any claims or damages arising from such uses.


## INSTALLATION

- ① Drill a 3/4" hole in the duct. Install sensor using gasket and screws provided. The specially designed pickup tube will ensure adequate air flow regardless of air flow direction.
- ② Wire sensor according to the product labeling:

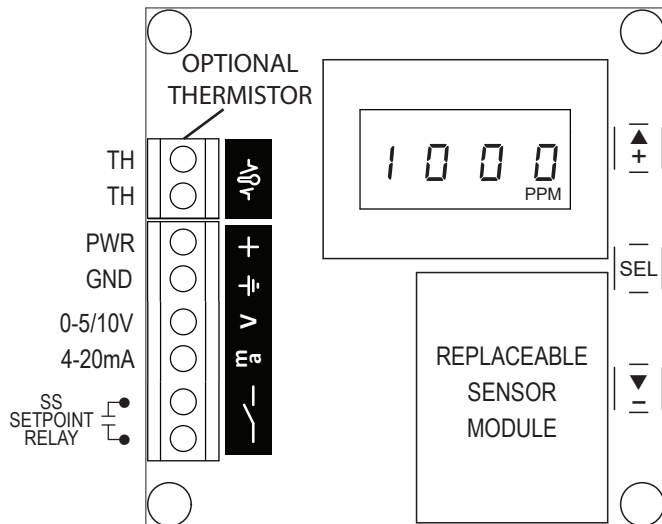

## INSTALLATION (CONTINUED)

Tighten the cable gland around the field wiring to prevent air from entering the enclosure and affecting the CO2 reading. For conduit connection, remove cable gland and replace with 1/2" NPT conduit adapter (not provided). Minimize air flow where wires enter the enclosure to prevent outside air from affecting the CO2 reading.

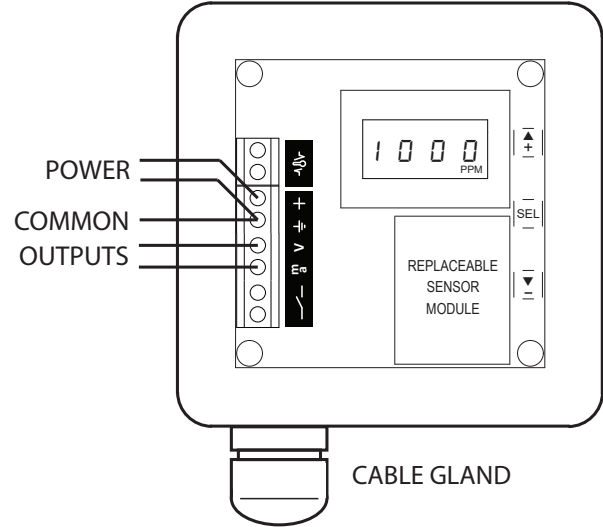

- ③ For voltage output operation, move jumper to 5v or 10v.

5V  10V

- ④ Apply power to sensor to complete optional setup functions:

### SETUP MENU GUIDE

HOLD ▼ AND ▲ FOR 5-SECONDS TO ENTER SETUP MENU.

PRESS ▼ OR ▲ TO CHOOSE PARAMETER TO ADJUST.

- SPH* Setpoint, Hi (Closed above this level)
- SPL* Setpoint, Lo (Open below this level)
- SEL* Scaling "2" = 2000ppm, "5" = 5000ppm
- Adj* Manual calibration adjustment +/-250ppm
- CAL* Automatic calibration mode - ON/OFF/RST (reset)
- run* Exit setup mode - display actual CO2 ppm

PRESS **SELECT** TO EDIT SELECTED PARAMETER

PRESS ▼ OR ▲ TO CHANGE VALUE

PRESS **SELECT** TO RETURN TO PARAMETER MENU

WHEN SETUP IS COMPLETE, SELECT *run*, OR WAIT FOR SETUP MODE TO AUTOMATICALLY TIME-OUT AND REVERT TO RUN MODE.

- ⑤ Close lid so that both clasps are secure. Install and tighten provided screw. Make sure cover is securely installed to prevent unwanted air flow from entering the enclosure.

## SPECIFICATIONS

Power supply		12-30vdc/24vac <sup>(1)</sup> , 100mA max.
Outputs	Dual analog	3-wire 4-20mA and 0-5v/0-10v <sup>(2)</sup> (jumper)
Output scaling	Selectable	0-2000ppm (default), 0-5000ppm (option)
Setpoint contact output	Programmable	Solid-state, 1A@30VAC/DC, N.O.
Sensor Performance	Type	Non-dispersive Infrared (NDIR)
	Accuracy	+/-40ppm +/-3% of reading
	Response time	60 seconds to 90% reading
	Update rate	3 seconds
LCD Menu Setup	<i>SPH</i> , Setpoint, Hi (On point)	500ppm to full-scale (800ppm default)
	<i> SPL</i> , Setpoint, Lo (Off point)	400ppm to full-scale-50 (700ppm default)
	<i> SCL</i> , Scaling	0-2000ppm or 0-5000ppm (2000ppm default)
	<i> ADJ</i> , Adjustment	Offset adjustment +/-250ppm (0 default)
	<i> CAL</i> , Calibration mode	Automatic mode ON/OFF/RST (reset) (default=ON)
Operating Environment	<i> RUN</i> , Run mode	Displays CO2 in ppm
	Temperature	32 to 122°F (0-50°C)
	Humidity	0-95%RH, non-condensing
Enclosure	Material	ABS/Polycarbonate
	Dimensions	4.0" h x 4.4" w x 2.1" d (+6.8" probe)

(1) One side of transformer secondary is connected to signal common. Dedicated transformer is recommended.

(2) 15-30vdc/24vac power supply voltage required for 10 volt output.

### Automatic Calibration feature:

When  *CAL* mode is set to ON, the sensor will automatically track baseline CO2 levels and gradually make adjustments to compensate for sensor drift due to long-term aging of the IR light source. In applications where CO2 levels are continuously elevated, or spaces are occupied day and night, it is recommended to leave the automatic calibration OFF. If the sensor module is replaced in the field, the automatic adjustments can be reset by selecting the RST (reset) option in the  *CAL* menu.

## TROUBLESHOOTING

Symptom	Solution
No output	Check wiring. Ensure power supply meets requirements.
CO2 reading error	Verify control panel software is configured for correct output scaling.
	Verify accuracy of test instrument. Observe installation and calibration guidelines
	Verify no air is leaking from housing, duct, or wire entry.
	Perform calibration only if necessary.

## CALIBRATION

Senva CO2 sensors are factory calibrated to controlled test gasses. To facilitate compliance with job requirements and commissioning procedures, provisions for output offsets are provided:

1. Locate calibration instrument and sensor in close proximity to each other in a controlled environment.
2. Compare output or display reading of sensor to calibration instrument, and note difference.
3. Using the built-in setup tool (pushbuttons and LCD) adjust sensor reading as needed.

In extreme cases where the sensor module has been damaged, a new module may be installed in the field. Consult factory for replacement module and instructions.